




## Load Cells Strain Gauges AA Series

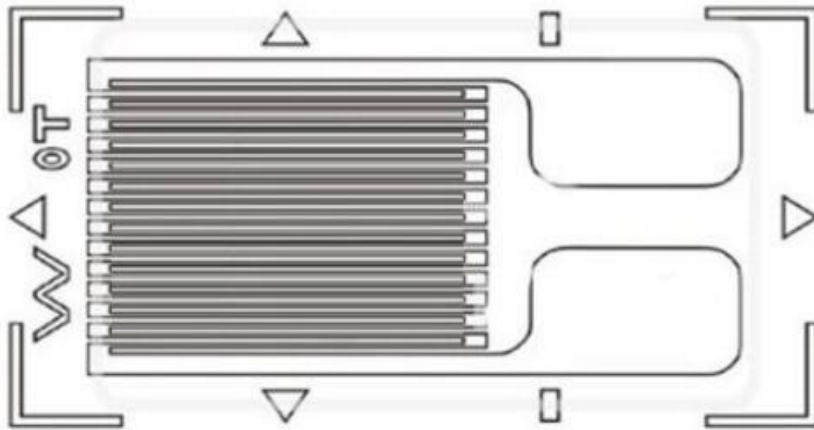

### Specification:

Product Model List ( Unit:mm)		
Model	Sensitive Grid Size	Base Size
BF120-1AA	1x3.14	4.7x4.0
BF120-3AA	3x2.44	6.6x3.4
BF175-3AA	3x2.6	6.6x3.6
BF350-1AA	1x3.75	4.6x4.7
BF350-1.5AA	1.7x3.85	4.8x4.7
BF350-2AA	2.1x3.4	5.1x4.2
BF350-3AA	3.2x3.1	7.3x4.1
BF350-4AA	4.1x3.1	8.2x4.1
BF350-5AA	5x2.9	9.3x3.9
BF350-6AA	6x2.9	10.3x3.9
BF500-3AA	3x3.6	7.3x4.6
BF1000-1.5AA	1.7x4.2	5.0x5.0
BF1000-2AA	2.1x4.0	5.1x5.0
BF1000-3AA	3.15x3.7	6.9x4.6
BF2000-3AA	3x4.2	6.6x5